
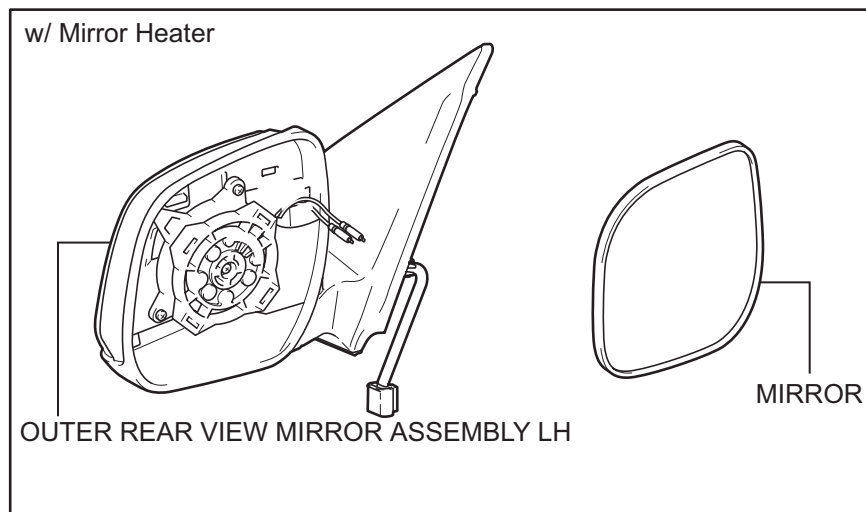


# OUTER REAR VIEW MIRROR

## COMPONENTS

MI

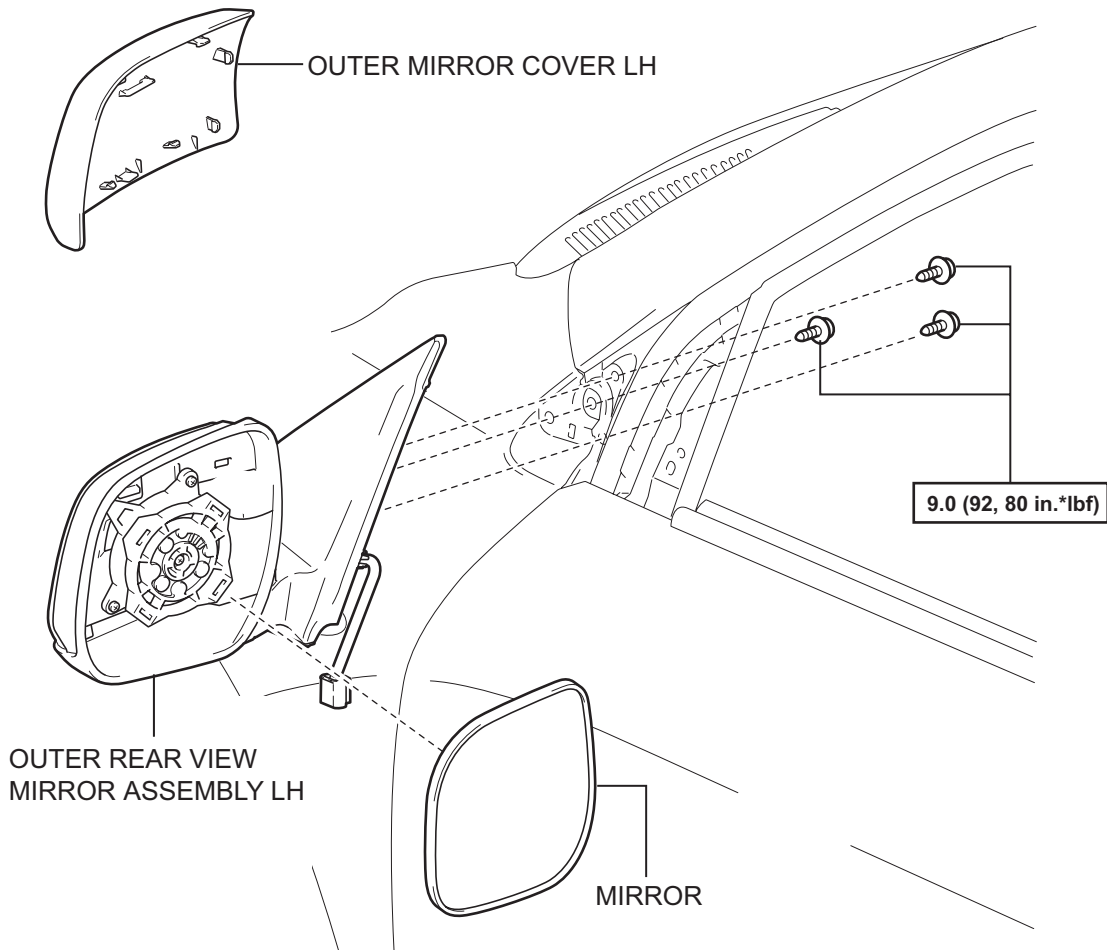

N\*m (kgf\*cm, ft.\*lbf) : Specified torque

FRONT DOOR TRIM BOARD  
SUB-ASSEMBLY LH

DOOR ASSIST GRIP

FRONT DOOR LOWER FRAME  
BRACKET GARNISH LH

DOOR INSIDE HANDLE BEZEL PLUG

FRONT ARMREST UPPER  
BASE PANEL LH



## REMOVAL

### HINT:

- Use the same procedures for the LH side and RH side.
- The procedures listed below are for the LH side.


1. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page [ED-19](#))
2. REMOVE FRONT ARMREST UPPER BASE PANEL LH (See page [ED-19](#))
3. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH (See page [ED-20](#))
4. REMOVE OUTER REAR VIEW MIRROR ASSEMBLY LH

- (a) Disconnect the mirror connector labeled A.
- (b) Remove the 3 screws.
- (c) Remove the outer rear view mirror.

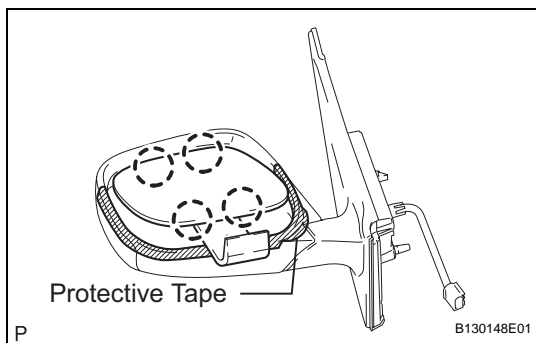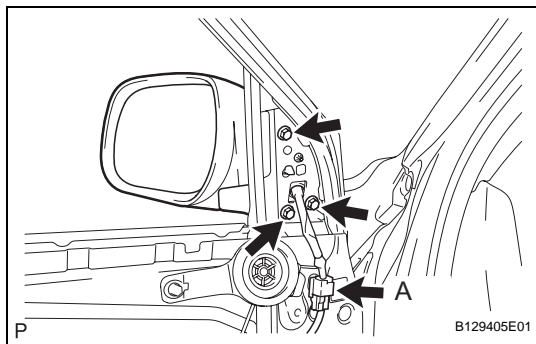


5. REMOVE OUTER MIRROR COVER LH (w/ Mirror Heater)

- (a) Using a moulding remover, detach the 4 claws.  
HINT:  
Apply protective tape to the mirror body.

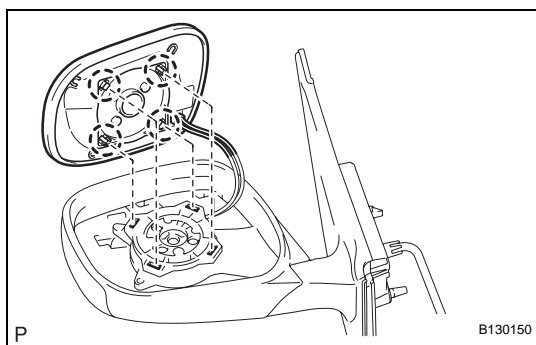


- (b) Remove the 2 connectors and disconnect the mirror.

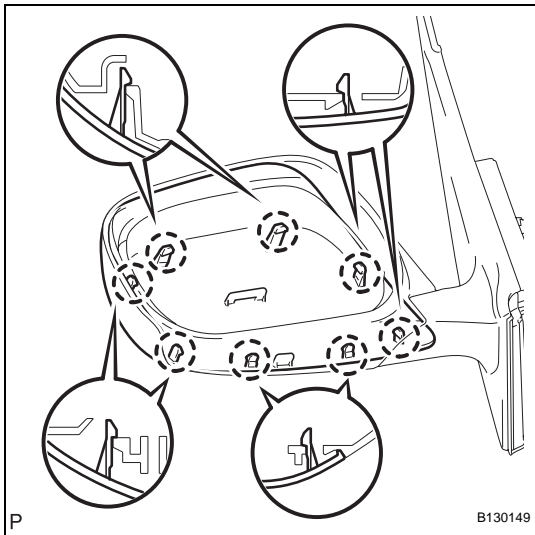

- (c) Using a screwdriver, detach the 8 claws and remove the mirror cover.

HINT:

Tape the screwdriver tip before use.

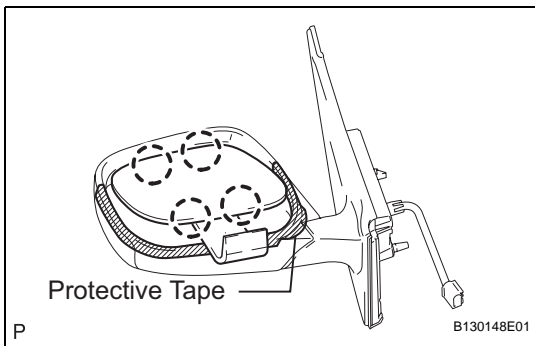


## 6. REMOVE OUTER MIRROR COVER LH (w/o Mirror Heater)


- (a) Using a moulding remover, detach the 4 claws.

HINT:

Apply protective tape to the mirror body.

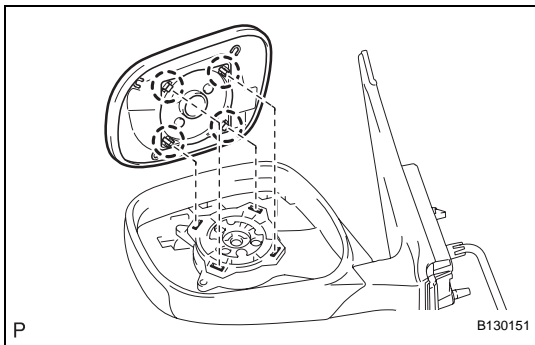

- (b) Disconnect the mirror.

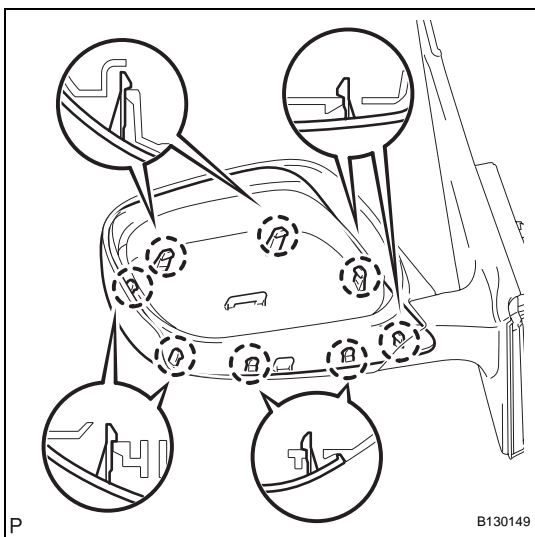


- (c) Using a screwdriver, detach the 8 claws and remove the mirror cover.

HINT:

Tape the screwdriver tip before use.

MI

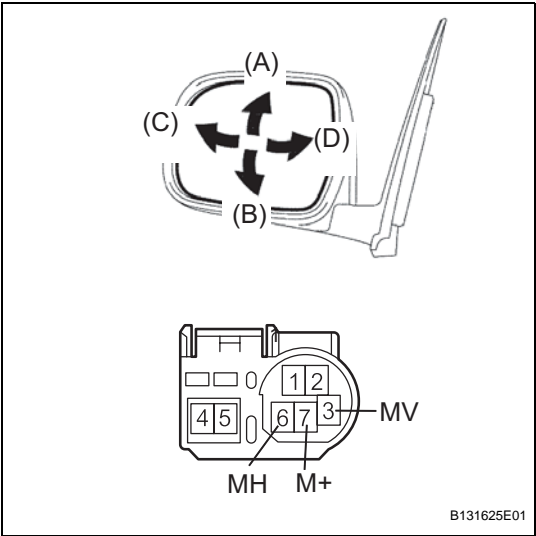

## INSPECTION

### 1. INSPECT OUTER REAR VIEW MIRROR ASSEMBLY LH

- (a) Disconnect the mirror connector.
- (b) Apply battery voltage and check the operation of the mirror.

**OK**

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 3 (MV) Battery negative (-) → Terminal 7 (M+)	Turns upward (A)
Battery positive (+) → Terminal 7 (M+) Battery negative (-) → Terminal 3 (MV)	Turns downward (B)
Battery positive (+) → Terminal 6 (MH) Battery negative (-) → Terminal 7 (M+)	Turns left (C)
Battery positive (+) → Terminal 7 (M+) Battery negative (-) → Terminal 6 (MH)	Turns right (D)

If the result is not as specified, replace the mirror assembly.

- (c) w/ Mirror Heater:  
Check the resistance.
- (1) Measure the resistance between the terminals.

#### Standard resistance

Tester connection	Condition	Specified Condition
4 (H-) - 5 (H+)	65°C (149°F)	4 to 12 Ω

If the result is not as specified, replace the outer rear view mirror.

- (2) Connect the cable from the negative battery (-) terminal to terminal 5 and the positive battery (+) terminal to terminal 4, then check that the mirror becomes warm.


**OK:**


**Mirror becomes warm.**

**HINT:**

It takes a short time for the mirror to become warm.

If the result is not as specified, replace the outer rear view mirror.

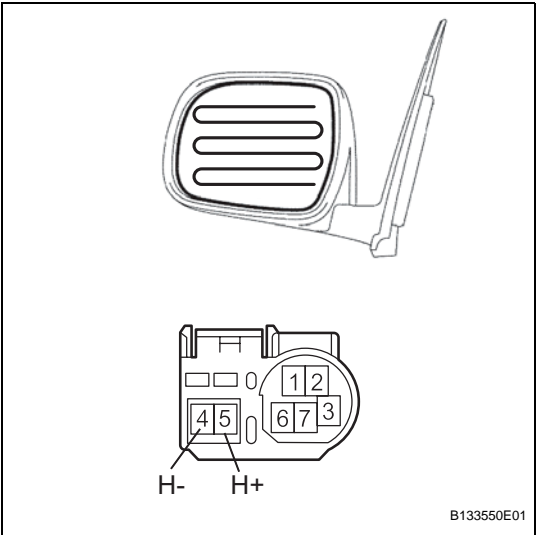

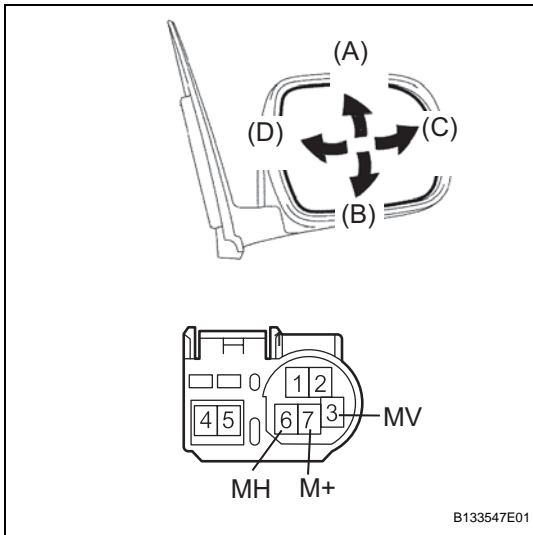

## 2. INSPECT OUTER REAR VIEW MIRROR ASSEMBLY RH

- Disconnect the mirror connector.
- Apply battery voltage and check the operation of the mirror.

**OK**

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 3 (MV) Battery negative (-) → Terminal 7 (M+)	Turns upward (A)
Battery positive (+) → Terminal 7 (M+) Battery negative (-) → Terminal 3 (MV)	Turns downward (B)
Battery positive (+) → Terminal 6 (MH) Battery negative (-) → Terminal 7 (M+)	Turns left (D)
Battery positive (+) → Terminal 7 (M+) Battery negative (-) → Terminal 6 (MH)	Turns right (C)

If the result is not as specified, replace the mirror assembly.

- w/ Mirror Heater:

Check the resistance.

- Measure the resistance between the terminals.

**Standard resistance**

Tester connection	Condition	Specified Condition
4 (H-) - 5 (H+)	65°C (149°F)	4 to 12 Ω

If the result is not as specified, replace the outer rear view mirror.

- Connect the cable from the negative battery (-) terminal to terminal 5 and the positive battery (+) terminal to terminal 4, then check that the mirror becomes warm.



**OK:**

**Mirror becomes warm.**

**HINT:**

It takes a short time for the mirror to become warm.

If the result is not as specified, replace the outer rear view mirror.

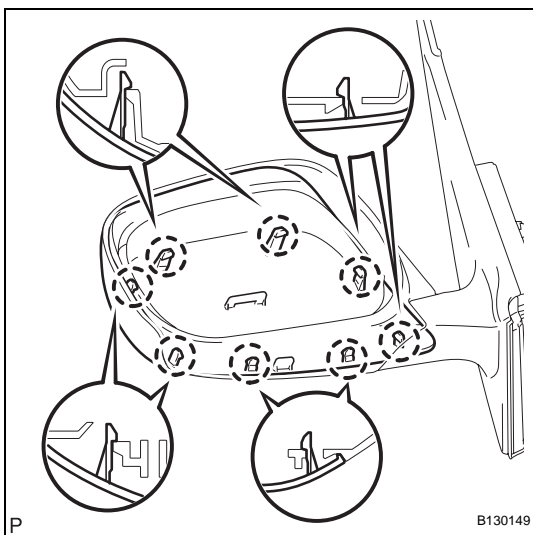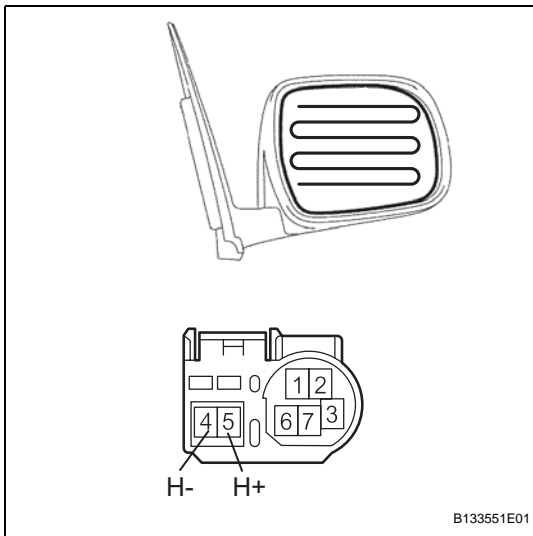

## INSTALLATION


### 1. INSTALL OUTER MIRROR COVER LH

- Attach the 8 claws and install the mirror cover.
- After installing the outer mirror cover, check that there is no gap between the cover and mirror body.


**HINT:**

If there is a gap between the cover and body, noise will occur during driving.


MI

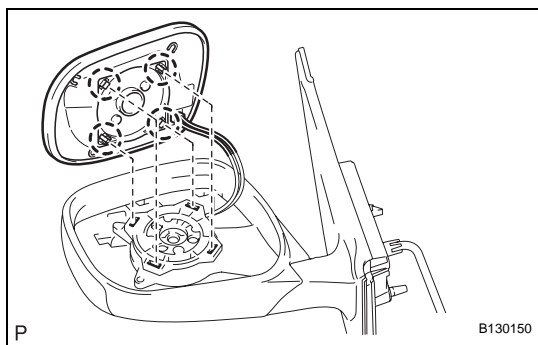

- (c) w/ Mirror Heater:  
Connect the 2 connectors. Attach the 4 claws to install the mirror.

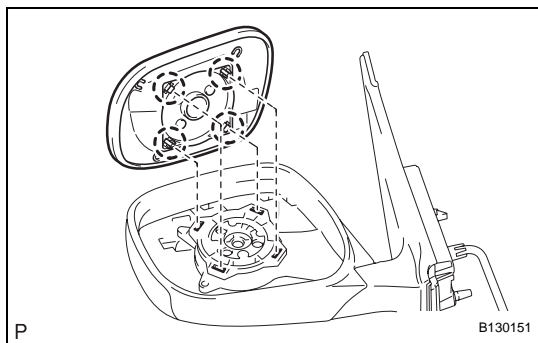

- (d) w/o Mirror Heater:  
Attach the 4 claws to install the mirror.

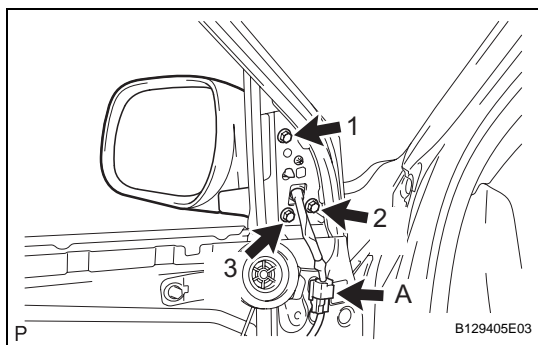

## 2. INSTALL OUTER REAR VIEW MIRROR ASSEMBLY LH

- Pass the connector labeled A and wire harness of the mirror through the wire harness hole.
- Temporarily install the mirror by inserting the bosses on the mirror into the holes on the vehicle.
- Tighten the 3 screws in the sequence shown in the illustration and Install the mirror.  
**Torque: 9.0 N\*m (92 kgf\*cm, 80 in.\*lbf)**
- Connect the connector labeled A.

## 3. INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH (See page [ED-33](#))

## 4. INSTALL FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page [ED-35](#))